

# Maple Armor

FW6308-CLA1

**Intercom**

**3G Wireless Building door phone**

**Operating/Programming/Installation Manual**

DOC-FW6308-CLA1

## Table of Contents

<b>SYSTEM FEATURES AND PARAMETERS.....</b>	<b>2</b>
<b>USER OPERATION.....</b>	<b>3</b>
1) MAIN MENU .....	3
2) CALLING:.....	3
3) PASSWORD TO UNLOCK: .....	3
4) THE FUNCTION MENU: .....	3
4.1) Instructions .....	3
4.2) Query.....	3
4.2.1) Search Room No:.....	<i>Erreur ! Signet non défini.</i>
4.2.2) Search tenant name list: .....	<i>Erreur ! Signet non défini.</i>
5) SET UP:.....	3
5.1 Password set: .....	3
5.2 System set: .....	3
5.3 User set: .....	4
5.4 Entrance guard:.....	4
5.5 Date transfer via software on PC: .....	5
<b>SMS FUNCTIONS.....</b>	<b>6</b>
1) ADMINISTRATOR SMS TO MODIFY USER INFORMATION:.....	6
2) ADMINISTRATOR SMS TO MANAGE ACCESS CONTROL: .....	6
3) ADMINISTRATOR SMS TO MANAGE DOOR CONTACT .....	6
4) DOOR CONTACT ALARM: .....	6
5) ADMINISTRATOR SMS TO MODIFY UNLOCKING CODE:.....	6
1 Administrator SMS to modify user information:.....	<i>Erreur ! Signet non défini.</i>
2 Administrator SMS to manage access control: .....	<i>Erreur ! Signet non défini.</i>
3 Administrator SMS to modify unlocking code:.....	7
4 Administrator SMS to set Temporary unlock password:.....	7
<b>INSTALLATION INSTRUCTIONS.....</b>	<b>8</b>
1 PRODUCT WIRING DIAGRAM .....	8
2 DIMENSIONS.....	9
3 WALL BOX AND HOLE SIZE .....	9

## System Features and Parameters

1. Mature mobile communication technology.
  2. Inset a Mobile SIM card and memory card into outdoor station, Frequency Range: UMTS/HSDPA: Quad band, 850/900/1900/2100MHz.  
GSM/GPRS/EDGE: Quad band, 850/900/1800/1900Mhz.
- This Product only support GSM network system, do not support CDMA**
3. Two working mode: 2G and 3G mode. Outdoor panel switch 2G or 3G mode automatic basic local signal strength.
  4. Maximum set three handline or mobile phone numbers to each user room number at outdoor panel.
  5. Also can set three administrator phone numbers.
  6. Number "0" is for Administrator, room number can't be 0, could set any other 1 to 4 digits number.
  7. Index means the capacity of panel, only could be set one time for each index number. For example, if the panel capacity is 512 homes, then could set Index number from 1 to 512, if index is No. 1, then next step to set room number (each four digits number).
  8. Visitors dial room number to call resident, outdoor station will call resident phone automatically. If the first phone no one answer after 30s, it will call the second one automatically, and then the third one.
  9. During calling, could unlock door through phone-- press " \* " .
  10. Visitors can search user room number via username, and also could check all resident name list.
  11. Password: Guard code (6 digits), original guard code is 123456; Public unlocking code (2 to 6 digits for choice), set via panel, could modify via panel directly or SMS; Original Personal unlock code (only 6 digits) is 123456, could SMS to change it.
  12. SMS functions (Page 6).
  13. Large capacity is 512 apartments. Allow setting 4 kinds according to needing, setting to be:50,160,260,512(homes). Minimum capacity is 50 apartments.
  14. Different system functions please see below items information.
  15. Signal insensitivity: better than -108dBm
  16. Working voltage: 12V-15V DC
  17. Working current: <130mA (Standby)
  18. Working temperature: -10 ℃ ~ +50 ℃
  19. Production Dimension (L x W x H): 340 x 135 x 40 mm

## User Operation

1. Outdoor station main menu shows: . Show "GSM" means under 2G mode, show "3G" means under 3G mode, will automatically switch, number "15" means signal strength, number 1~31 means the signal strength, will automatically change basic local signal strength.

2. **Calling:** Visitors touch the keyboard, outdoor panel will display dial tips: , input room number and press to make call. If error input, press to delete and then reinput. It will return back to main menu without any operation within 5 seconds or error input, also press to return main menu. Before someone answer the calling, visitor press to hang off. Under talking, press to hang off, during calling, press \* call to next number (Please set three number as same one, if only have one user phone number), press "\*" unlock door 1; press "#" unlock door 2. When calling room number which is not exist on panel, it will prompt:

3. **Password to unlock:** Press could see: if need personal code to open door, input room number, then #, enter the page of code: , then input 6 digits code (only could 6 digits for personal code), last press to open door. If want to input common unlock code, then press directly to input correct 2-6 digits password.

### 4. The Function Menu

1). **Instructions:** Press outdoor station display function menu: and then press , will display . Press return main menu, or it will return main menu automatically after 5 seconds.

**Query:** If visitors do not know the resident room number, they can search through with Query function.

I. **Search Room No.:** Visitors press button, the outdoor panel will display function me , then press , it will display . After input, press , it will show all names which included the letter you input, choice correct one (press 1 and 7 to turn up and turn down, press 4 and 6 to turn left and right side), then press again to call the user directly, press exit the call. If did not find the name, it will show

II. **Search tenant name list:** Press , it will show , press is for the previous name, press it is for the next name. Press to call the user, press

### 2). Set up:

to exit the calling (Note: can't exit when record pic before calling).

Administrator could set and modify unlock code and administrator code through this function menu, set admin. and resident phone No, set talking time/Mic volume/Speaker volume, view resident pic, ect..

Press will display function menu: , then press , after input correct password will enter setting menu , then enter password setting: , input 6 digits admin password (the default admin password is: 123456, change what you need, and remember. If forget the password, please contact after-sales service).

### I. Password set:

\* Admin code: Press to enter admin password setting page: , input 6 new digits password twice. If you input password twice correct, the display will show "correct" and return to previous menu. If you input different password twice, it shows "Error" then back to previous page.

\* Unlock Password: Press to enter unlock password setting page: , input new 2-6 digits password.

\* Enable unlock: Press to enable the function of unlock code, display , then return to the previous page.

\* Disable unlock: Press means disable the function of unlock with code, display: , then return to previous page.

II. **System set:** Press to enter the System Settings page:

\* Talk Time: Press to enter the page of talking time: , 1 - 3 minutes. Input 1 or 2 or 3 then return to previous page.

\* Micro Volume: Press to enter the page of micro volume: , 0 - 8 for microphone volume level. The higher the value, the louder. The page shows "Micro Volume: 3" means the current micro volume. Return to previous post automatically when enter the relative number.





Please note only need open “ regoxc.bat” for one time on same PC.

\* Next to open the software “ **DZ-GSM1.exe**”, press-- **NEW**, could see “**please enter a new file name**”, the enter name as --“**contact info.txt**” (please note, the name must be same like it) as below pics, next step could to edit users details.

**Please note: Room number “0” is for administrator, which can’t be changed, only could edit phone numbers, about others users room numbers could be modified accordingly.**

After finish edit all users details, press **SAVE**, will create a new file--“**contact info.txt**”.

\*Connect SD card on PC, create a new folder-- “**contact**” on SD Card, copy the document --- “**contact info.txt**” under the folder (if exist same document, please instead the old one).


\*Finally input the Memory card on GSM device.

**Please note: 1. If the second time add contact data, do not need to create the file "contact" again on Memory card.**

**2. Please edit the users details according to the device capacity.**

**3.Could set private unlock password on the software.**

**4.If system is Win10, please run the software as administration.**

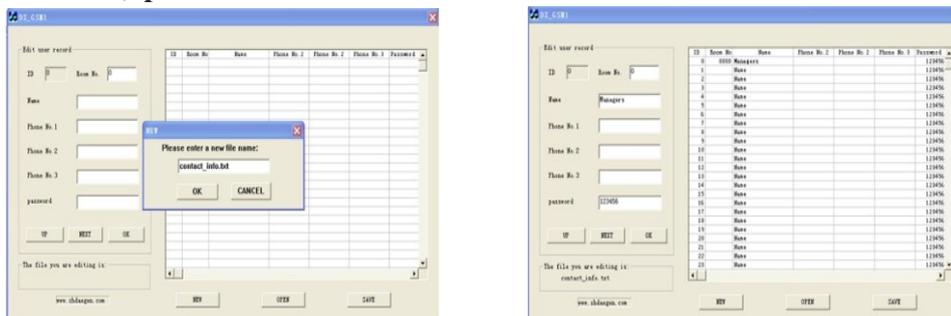

**Please Note: When set Room number, should set ID number (Index), which depends on GSM capacity.**

**For example, if your GSM device is 50 homes, then ID should set from 1 to 50, and then will enter the page setting Room number, name, and phone numbers. (ID Number can’t be the same, and Room number can’t be the same).**

## SMS functions

### I. Administrator SMS to modify user information:

\*Modified the username: 02\*#NNNN#cccc, NNNN means room number, cccc means username.

\*Modified the user phone numbers:

- 1) 03\*#NNNN#10086, 03 means operating instruction for modified the first phone no, NNNN means room number, 10086 means phone number.
- 2) 04\*#NNNN#10086, 04 means operating instruction for modified the second phone no, NNNN means room number, 10086 means phone number.
- 3) 05\*#NNNN#10086, 05 means operating instruction for modified the third phone no, NNNN means room number, 10086 means phone number.

\* Administrator SMS to delete user: SMS: 12\*# Room number.

Note: If delete user via SMS, then Index, room number, username, and phone numbers are all deleted.

### II. Administrator SMS to manage access control:

\*Delete Card: 06\*#12 digits ID card number. (If less 12 digits, please add the digits “0” to the front)

\*Register new card: 07\*#12 digits ID card number. (If less 12 digits, please add the digits “0” to the front)

### III. Administrator SMS to manage Door contact:

- 1) Check Door switch status: send 08\*# to the panel, if the door is closed, it will send SMS back with “door close”, if the door is opened, it will send SMS back with “door open”
- 2) Admin set unlock delay time: 09\*#TTT, (TTT means time from 001--254s). For example, if want to set the delay time of door contact is 10s, admin should send SMS: 09\*#010.
- 3) Administrator SMS set to close the function of door contact alarm: SMS 10\*# (Default setting is open).
- 4) Administrator SMS set to open the function of door contact alarm: SMS 11\*#.
- 5) Door Contact Alarm: If the door did not close in the delay time you set, GSM device will send SMS to the first administrator mobile phone with the content of “door is open”.

#### **IV. Administrator SMS to modify unlocking code:**

- 1) SMS modify Public unlocking code: **00\*#New Password** (Length of new code much same as the device setting code).
- 2) SMS to modify Personal unlocking code (Must be 6 digits): **01\*#NNNN#CCCCCC** (NNNN means 4 digits room number, CCCCCCC means 6 digits new code).

#### **V. Administrator SMS to set Temporary unlock password:**

- 1) SMS set the number of times for Temporary password: **13\*#XXX#CCCCCC** (XXX means 3 digits numbers of times, CCCCCCC means 6 digits temporary password), Maximum is 100 times.

Please Note: Set the number of times for Temporary password, Maximum 6 times. If exceed 6 times, from the 7 time, it will replace the first time set temporary password automatically.

For example: Need to set 30 times, password with 654321, then SMS: 13\*#030#654321. Will get back message “set success!” means set success. Or the message will be “set fail!”

- 2) SMS set the time for Temporary password:

**14\*#XXXX.XX.XX.XX#XXXX.XX.XX.XX#CCCCCC** (XXXX.XX.XX.XX means Year, Month, Day, Time, CCCCCCC means 6 digits temporary password).

Please Note: Set the time for Temporary password, Maximum 6 times. From the 7 times setting, it will replace the first time set temporary password if the first time set already expired. If the first time set did not expired, then can't set the 7 times set.


For example: Need to set password with 654321, valid Period from 2016. October 15th 10am to 2016. October 16th 9am, then

SMS: 14\*#2016.10.15.10#2016.10.16.09. Will get back message “set success!” means set success. Or the message will be “set fail!”


**Adjust Unlock delay time:** Could adjust unlock delay time by yourself.

# Installation Instructions

## 1. Product wiring diagram

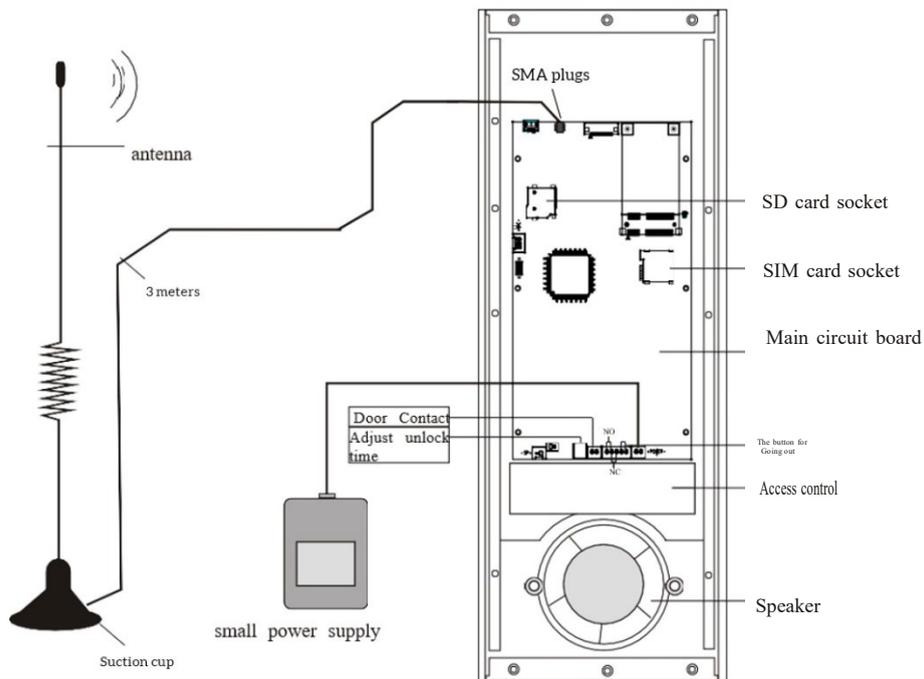

2.Dimension

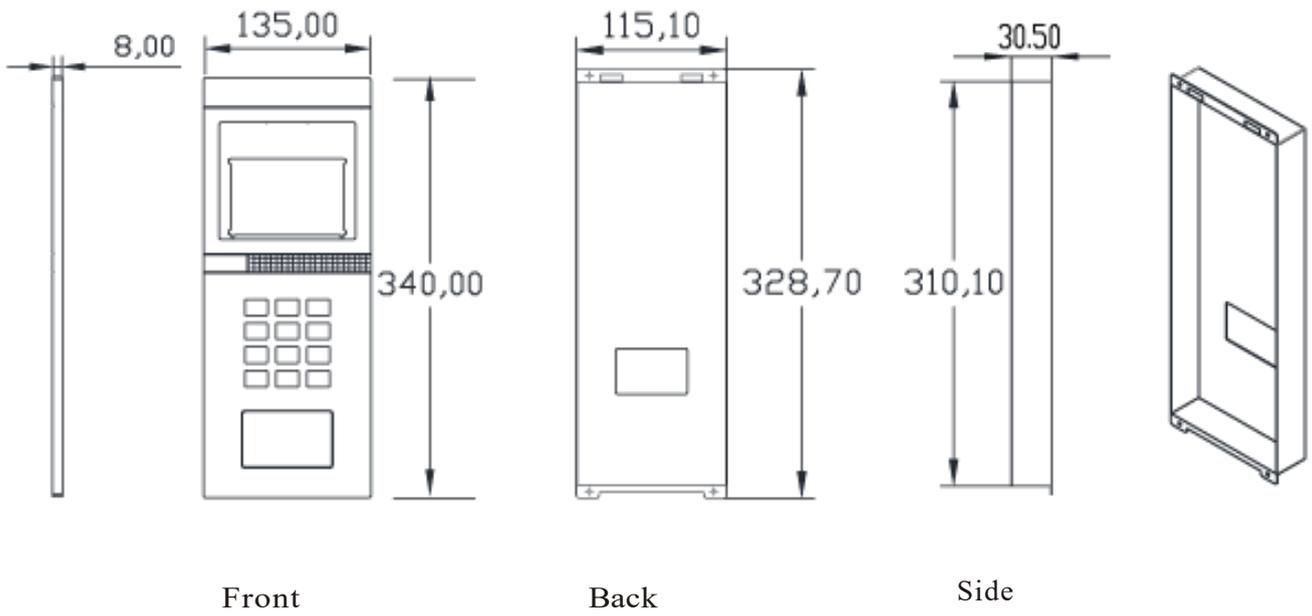

3. Against the wall box and Hole Size

