



Remote LED Indicator

FW561-RI



DESCRIPTION

The FW561-RI Remote LED indicator is a component provides visual indication of the device status connected with it. It is compatible with mini-Input Module model FW811M, it shall be located in the same room as FW811M.

ATTENTION

Products must be installed in accordance with the National Fire Alarm Code, NFPA 72, CAN / ULC-S524 and / or National Electrical Code, depending on the country of the installation. Check information on equipment used in the system from other manufacturers for instructions and restrictions. The detector should never be installed in the following places: where there is a lot of exhaust gas, kitchens, near fireplaces, boilers, etc. Smoke detectors should not be used with detector guards unless the suit has been evaluated and approved for this case.

NOTE

Do not paint this unit.

Any material extrapolated from this document or Maple Armor's instructions or other materials describing the product for promotional or advertising purposes, or for any other purpose, including the description of the application, the use, installation and testing of the product is the sole responsibility of the user. Maple Armor assumes no responsibility for the use. In no event shall Maple Armor's liability exceed the purchase price of the product.

Page 1 sur 2

INSTALLATION

1. Mount the module on to the electrical box

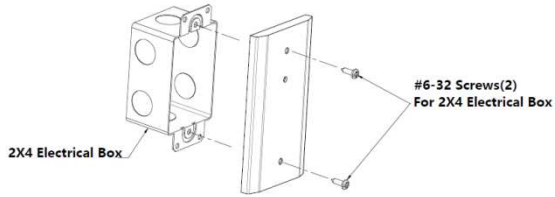


Figure 1 module installation

2. Wire the LED to the compatible device as described in the installation manual of the compatible device.

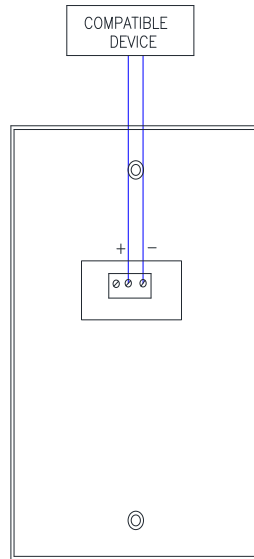


Figure 2 Wiring Diagram

SPECIFICATION

Active current	2 to 5 VDC
Nominal Voltage	6.5 MA max
Operating temperature	32F to 120F (0C to 49C)
Operating Humidity	0% to 93% RH

CATALOG NUMBER TO ORDER

Model	Description
FW561-RI	Remote LED Indicator